

MAZDA VT-37 TPMS Tool Updating via WebVT PC Software



Fig. 1

Install WebVT PC Suite

- 1) Connect the TPMS tool to the USB port and power the tool ON.
- 2) Go to <http://webvt.atteg-tpms.com/> to download the PC software.
- 3) Click on the **WebVT** icon to start the program.
- 4) A screen will appear that says, "**Welcome to the Install Shield Wizard for WebVT.**" Click "**Next >**"
- 5) A window will appear for choosing the destination location, click "**Next >**"
- 6) Follow the instructions until the window with the "**Finish**" button appears.
- 7) Click "**Finish**" when the **WebVT** installation is complete.

Note: To order annual update software part numbers, please see your dealer for availability and pricing.

Update the tool software

Before updating, ensure that the battery is fully charged.

- 1) Connect the USB cable from the **TPMS TOOL** to the **PC** and turn the device on.
- 2) Start **WebVT** software.
- 3) A screen will appear indicating "**Update Device**".
- 4) Press "**Yes**" to update to the latest software version. The update will take several minutes to complete, and the status bar will indicate the percentage of update completed.

Warning!

Turn off the screen saver function on your PC and do not disconnect the TPMS TOOL from the PC or turn off your computer during the update process. Doing so could result in serious damage to the tool

For assistance on Tool Updating 888-621-8767 or help@supporttpms.com

For more efficient service, please have tool serial number ready